


Instructions

Danfoss


067R9609

067R9609


Orifice for TE 5 → 55

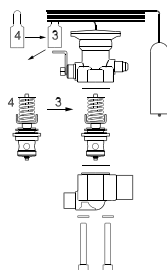

TE 5

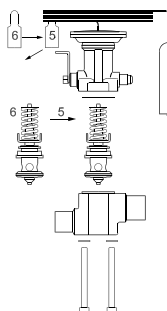


TE12, TE20

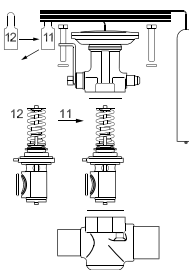

TE 55

Old orifice			New orifice			Nominal capacity TR/kW								Factory settings
Type	Orifice No.	Old code	Type	New code	Orifice No.	R134a	kW	TR	kW	TR	kW	TR	kW	Y-value
TE5	1	067B2089	TE5	067B2788	0,5	2	7,0	2,5	8,7	3	10,8	3	11,1	26
	2	067B2090		067B2789	1	3,5	12,0	4	14,6	5	18,3	5,5	18,8	26
	3	067B2091		067B2790	2	5	16,9	6	20,1	7,5	25,6	7,5	26,1	26
	4	067B2092		067B2791	3	6	21,7	7,5	26,3	9,5	33,0	10	33,9	26
TE12	1	067B2005 ¹⁾	TE12	067B2792	4	8,5	29,0	10	34,6	12,5	43,9	13	44,8	26
	2	067B2006 ¹⁾		067B2790 ¹⁾	2	5	16,9	6	20,1	7,5	25,6	7,5	26,1	26
	3	067B2007 ¹⁾		067B2791 ¹⁾	3	6	21,7	7,5	26,3	9,5	33,0	10	33,9	26
	4	067B2008		067B2792 ¹⁾	4	8,5	29,0	10	34,6	12,5	43,9	13	44,8	26
TE20	1	067B2172	TE20	067B2708	5	11	39,0	14,5	50,6	17	58,8	17	60,0	37
	1	067B2170		067B2709	6	13,5	47,5	17,5	61,0	20,5	71,2	21	72,7	37
	1	067B2175		067B2710	7	16	55,8	20	70,6	23,5	81,4	24	84,5	37
				067G2771	8	20	69,5	22	77,6	29,5	104,0	32,5	113,0	31
TE55	1	067G2005	TE55	067G2771	8	20	69,5	22	77,6	29,5	104,0	32,5	113,0	31
	1	067G2001		067G2771	9	22,5	78,4	24	84,5	32,5	113,5	37,5	131,0	31
	1	067G2011		067G2701	10	29,5	102,8	34	118,4	42,5	148,4	44,5	156,0	32,5
				067G2704	11	35,5	124,7	41	143,2	50,5	177,4	54	190,0	32,5
				067G2704	11	35,5	124,7	41	143,2	50,5	177,4	54	190,0	32,5
				067G2704	11	35,5	124,7	41	143,2	50,5	177,4	54	190,0	32,5
	2	067G2006		067G2707	12	44	154,7	48,5	170,3	61,5	215,3	65,5	228,8	32,5
	2	067G2002		067G2710	13	54,5	190,0	60,0	209,8	78	273,6	80,0	281,0	32,5
	2	067G2012		067G2710	13	54,5	190,0	60,0	209,8	78	273,6	80,0	281,0	32,5

1) change to TE5 valve body and element

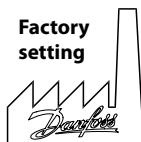

SS = 4°C (7°F)

